

*Based on Unit shipment sales for 2010. Excludes pitchers and faucet mount systems sales and includes only in-home point-of-use drinking water treatment systems.

Pureit Marvella RO™: The only RO with **Advance Alert System**



Marvella RO



Turns even hard water of TDS 2000 PPM into soft and tasty water



Advanced 5-stage technology



Triple safety assurance of RO + UVM + ROPL



World's leading RO Membranes



Advance Alert System



PRO-10-12

instructions manual



Marvella RO

WELCOME TO THE PUREIT FAMILY

Congratulations!

We thank you for the trust you have shown in our product and we assure you that our product will live up to your expectations. Millions of users trust Pureit to provide safe water to their loved ones.

Our product is developed by experts and it is designed to give you water that is 'As Safe As Boiled Water™'. Pureit adheres to some of the toughest standards of leading institutions both in India and abroad.

If you need to get in touch with us for anything, please call us at 1860-180-1000.

We once again thank you for buying Pureit Marvella RO™ and we look forward to a long and fruitful association with you.

CONTENTS

Unique Features of Pureit Marvella RO™	03
Know your Pureit Marvella RO™	04
Technical Specifications of Pureit Marvella RO™ Purifier.....	05
Pureit Marvella RO's Unique Technology	06
Water-Flow Diagram and Electrical-Circuit Diagram	07
Installation and Important Instructions	08
Additional Assurance of Safety	13
Ordering CSF Germkill Kit™ and Membrane Germkill Kit™ ..	15
Cleaning and Maintenance	16
Germkill Kit™	27
Frequently Asked Questions (FAQs)	28
Troubleshooting	30
Warranty Card and details	31
Statement of Hindustan Unilever's Intellectual Property Rights	34

UNIQUE FEATURES OF PUREIT MARVELLA RO™



Advance Alert System

Pureit's Advance Alert System give you a complete status update on the functioning of your purifier thereby assuring you safe water and maximum convenience.



Triple safety assurance of RO + Ultra Ventilated Membrane (UVM) + RO Purity Lock

Pureit Marvella RO™ is equipped with RO Membrane and Ultra Ventilated Membrane (UVM) ensuring that the water is purified not once but twice! As an additional safety assurance it is equipped with 'RO Purity Lock' (ROPL) mechanism which monitors the usage, and calculates the life of the consumables and membranes and indicates when to replace them.



Advanced 5-stage technology

Pureit Marvella RO™ works on a 5-stage technology which ensures that you get water that meets the standards set by the USEPA for microbial contaminants.



RO Purity Lock system

Pureit Marvella RO™ has a unique 'RO Purity Lock system' (ROPL) which shuts the water flow after the life of Carbon and the RO Membrane is over. The Carbon consumable is designed to last approximately upto 4000 litres* of usage and RO Membrane approximately 8000 litres* of usage. This system ensures you don't drink unsafe water even by accident.



TDS removal up to 2000 PPM

Pureit Marvella RO™ turns even hard water of TDS 2000 PPM into soft and tasty water.



Uses one of the World's leading RO Membranes

Pureit Marvella RO™ uses one of the World's leading RO Membranes which delivers water that is of the highest quality.



Large 8 litres storage tank

Pureit Marvella RO™ has 8 litres of storage tank. So you don't need to fill vessels or water bottles.



Advanced voltage fluctuation guard

This protects your purifier from sudden voltage fluctuation as high as 300 Volts.



Break resistant tap

Pureit Marvella RO™ is equipped with break resistant tap which is tested for up to 50000 times.



Fully automatic


Pureit Marvella RO™ is fully automatic and works without any intervention. The system senses if the water tank is not full, purifies and stores water automatically.

* Under tested conditions of 18 PSI input pressure, 450–500 PPM TDS and 25°C temperature.


While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.

KNOW YOUR PUREIT MARVELLA RO™

- 1 Cleaning solution dispenser
- 2 Power indicator
- 3 Storage tank indicator
- 4 CSF (Carbon & Sediment Filter) life indicator
- 5 Membrane life indicator
- 6 Storage tank
- 7 Tap
- 8 Sediment filter assembly
- 9 Inlet tube
- 10 Diverter controller
- 11 Diverter assembly
- 12 Waste water pipe

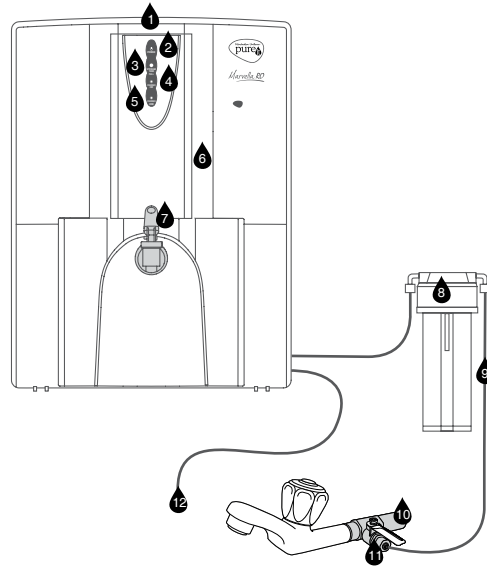

- 1 Tap
- 2 Indicators
- 3 Ultra Ventilated Membrane (UVM)
- 4 RO Membrane
- 5 Post-Sediment Filter
- 6 Taste Modulator / Post RO Carbon Polisher* (Optional)
- 7 Carbon Filter
- 8 Pump
- 9 Low Pressure Switch
- 10 Solenoid Valve
- 11 SMPS
- 12 Control Circuit
- 13 Storage Tank
- 14 Pre-Sediment Filter
- 15 Waste Water Tube
- 16 Cleaning Solution Dispenser

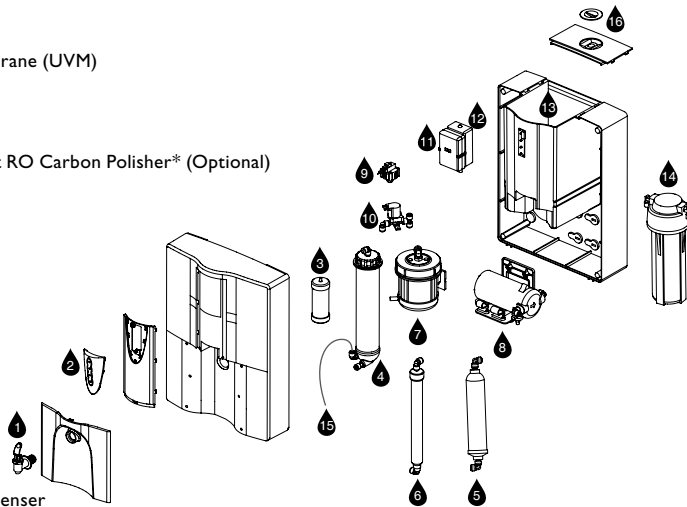

* Post RO Carbon Polisher fitted in the device may need to be changed intermittently at extra cost in case you face smell issues.

TECHNICAL SPECIFICATIONS OF PUREIT MARVELLA RO™ PURIFIER#

Pureit Marvella RO™	
Height	480 mm
Width	360 mm
Depth	265 mm
Weight of 'Pureit Marvella RO™'	8.4 kgs
Flow rate*	Approximately 9 –12 litres per hour
Storage tank capacity	8 litres
5 Stage Purifying Technology	PP melt blown sediment filters, Activated carbon block, Reverse osmosis membrane and Ultra ventilated membrane
Membrane type	Thin film composite spiral wound
Pump type	Diaphragm pump, 24V DC
% Recovery*	Typically 25%
TDS reduction**	Upto 90%
Power rating	36 Watts
Pressure rating	5–30 PSI***
Input Voltage	100-240VAC, 50-60 Hz
Material of construction for plastic parts	Food safe, non-toxic, engineering grade plastics
Length of Power adaptor	1.8 metres
Total Dissolved Solids	200 mg/lit (min) – 2000 mg/lit (max)
Total Hardness	500 mg/lit (max)
Iron	0.3 mg/lit (max)
Turbidity	10 NTU
Germkill Kit™	
Material of construction	Food safe, non-toxic, engineering-grade plastics
Purification capacity (CSF Germkill Kit™)	The consumables Germkill Kit™ has been designed to give approximately 4000 litres of purified water depending on the input water pressure, TDS and water temperature
Purification capacity (Membrane Germkill Kit™)	The RO Membrane and Ultra Ventilated Membrane (UVM) has been designed to give approximately 8000 L of purified water. The actual life of the filters will depend on the input water pressure and TDS and water temperature
Germkill performance standard	Meets stringent international criteria for microbiologically safe drinking water – e.g., Environmental Protection Agency (EPA), USA.

* Permeate flow rate and recovery are based on standard test conditions and may vary depending on input water quality, TDS, pressure and life of filter elements.


** Input water quality and TDS content are important determinants of output water quality.

*** If input pressure exceeds 30 PSI, please install a company provided pressure reducing valve at an additional cost. If the pressure is lesser than 5 PSI than you need to buy 'Pressure enhancing pump' at an additional cost.

Technical specifications are subject to change or improvement without prior notice.

.. While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.

PUREIT MARVELLA RO'S UNIQUE TECHNOLOGY

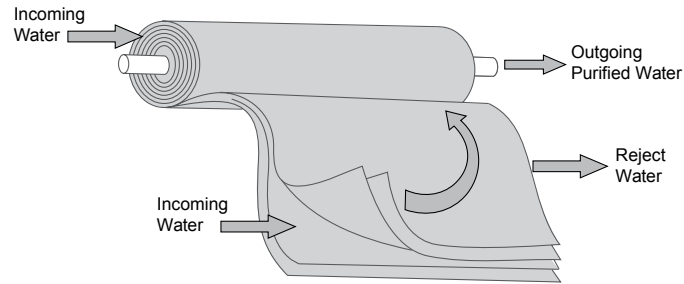

World's leading RO Membranes

Pureit Marvella RO™ uses the World's leading RO Membranes which is best in class and tested for superior performance. Our RO Membrane is capable of not only removing the harmful germs in water but also the excess TDS (total dissolved solids) thus making the water safe and tasty.

'Pureit Marvella RO™' works on a 5-stage purification process which ensures that you get water that meets the standards set by USEPA for microbial contaminants and improves the taste by removing excess TDS.



1 Unique Pre-Sediment Filter

Removes fine and coarse particulate impurities/dirt and improves the life of the carbon filter.

2 Unique Carbon Filter

Removes chlorine and organic impurities like harmful pesticides. It also adsorbs bad taste and odour causing organic compounds from water.

3 Unique Post-Sediment Filter

Removes remaining fine and coarse particulate impurities/dirt and improves the life of RO Membrane.


4 RO Membrane

Removes dissolved salts, hardness, pesticides and heavy metals like arsenic, lead and mercury. It also removes microbial contaminants like bacteria, virus, protozoa and cysts.


5 Ultra Ventilated Membrane (UVM)

Ultra Ventilated Membrane (UVM) is added post RO, which ensures that the water is purified not once but twice.

WATER-FLOW DIAGRAM

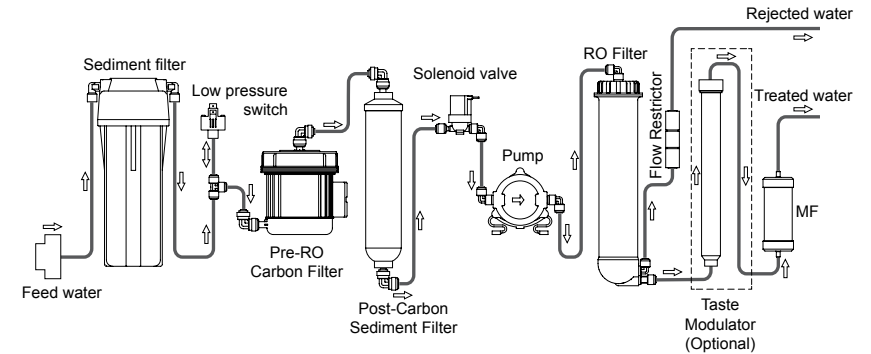


ELECTRICAL-CIRCUIT DIAGRAM

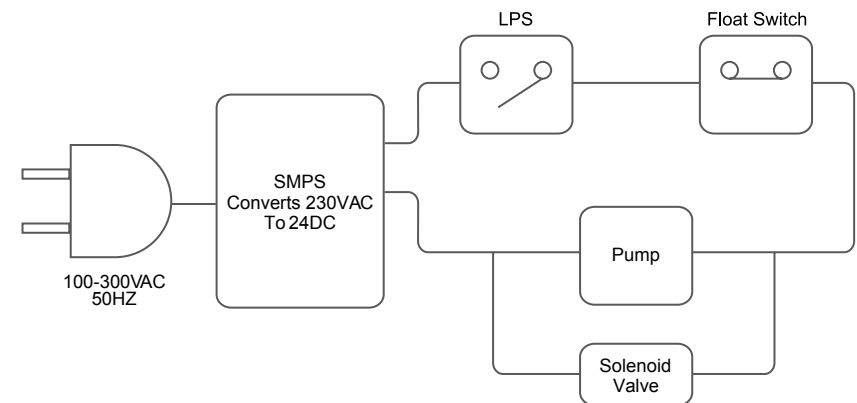


INSTALLATION AND IMPORTANT INSTRUCTIONS

①

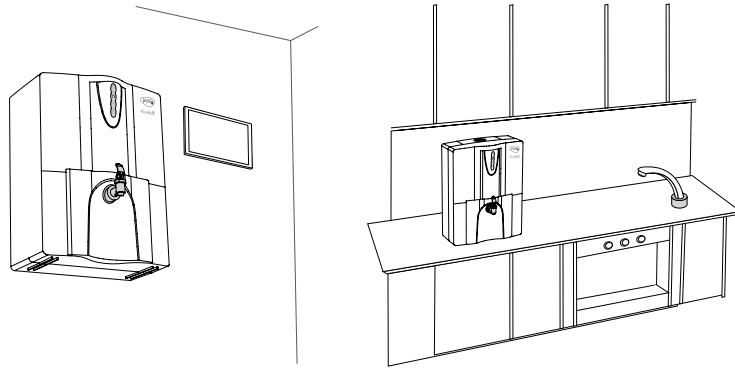

Pureit Marvella RO™ must be installed on the wall or can be used as table top. Please follow the instructions given below while installing.


②

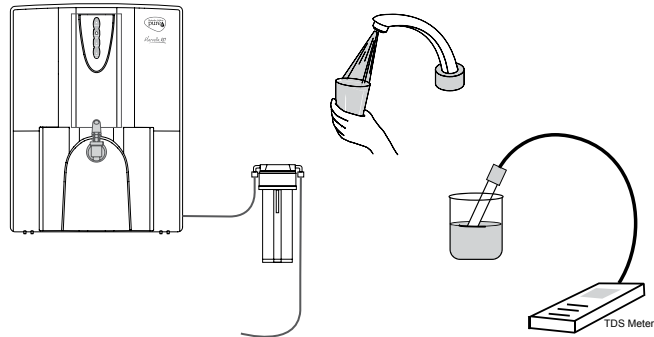

Make sure you test the input water TDS before installing Pureit Marvella RO™. The minimum input water TDS should ideally be more than 200 PPM and maximum must be 2000 PPM. If the TDS is less than 200 PPM then you need to use the 'TDS Modulator + Mineral enhancer' which can be bought at an additional cost.


INSTALLATION AND IMPORTANT INSTRUCTIONS

③

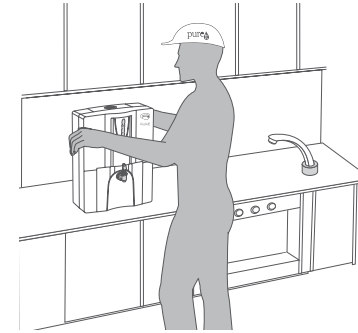

Ensure Pureit Marvella RO™ is installed by a trained Pureit technician.


④

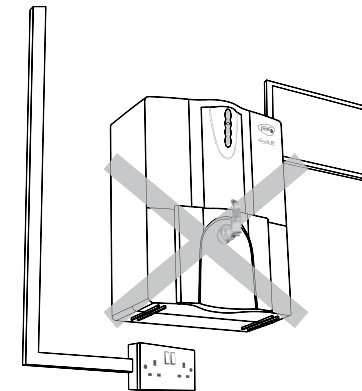

Ensure Pureit Marvella RO™ is not installed above any electric socket. Ensure that you use the plug provided with the purifier and do not change it.


INSTALLATION AND IMPORTANT INSTRUCTIONS

⑤

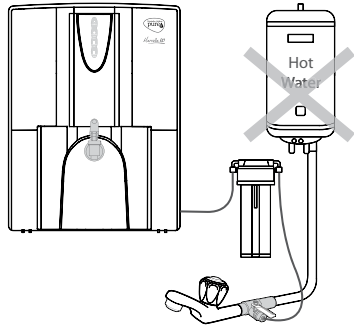


Pureit Marvella RO™ should not be connected to any hot water tap.

⑥

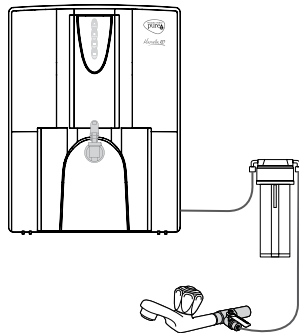


Ensure that the purifier is placed close to the plumbed inlet connection (not more than 2 metres). Also, avoid sharp bends to the pipes.

⑦

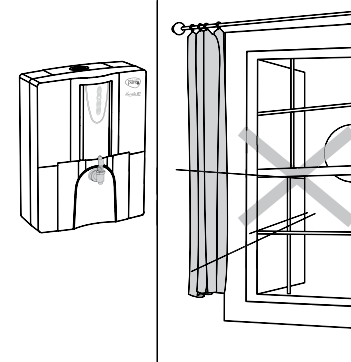

Install your Pureit Marvella RO™ away from any direct sunlight, and ensure there is enough ventilation.

⑧

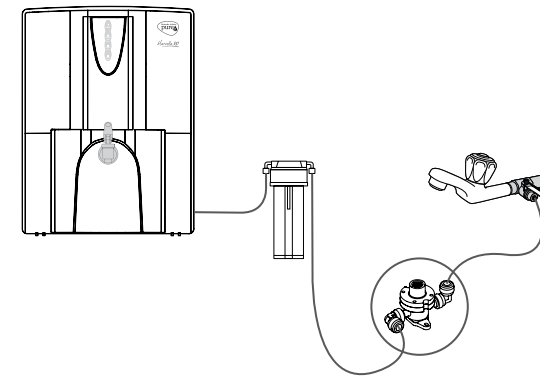


Ensure input pressure is more than 5 PSI and less than 30 PSI. If it is more than 30 PSI, you need to use 'Pressure reducing Valve' which must be bought at an additional cost. If the pressure is less than 5 PSI then you need to buy 'Pressure enhancing Pump' which can be bought at an additional cost. Ensure you buy them from the authorized service personnel of Pureit.

INSTALLATION AND IMPORTANT INSTRUCTIONS

INSTALLATION AND IMPORTANT INSTRUCTIONS

9

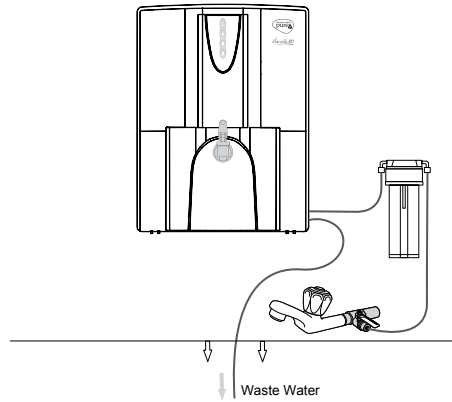


Ensure the waste water pipe is placed lower than the tap of the purifier.

ADDITIONAL ASSURANCE OF SAFETY

As an additional assurance of safety Pureit Marvella RO™ has a unique 'RO Purity Lock system' which monitors the usage and shuts the water flow after the life of CSF Germkill Kit™ and/or the Membrane Germkill Kit™ is over.

'Change CSF' indicator

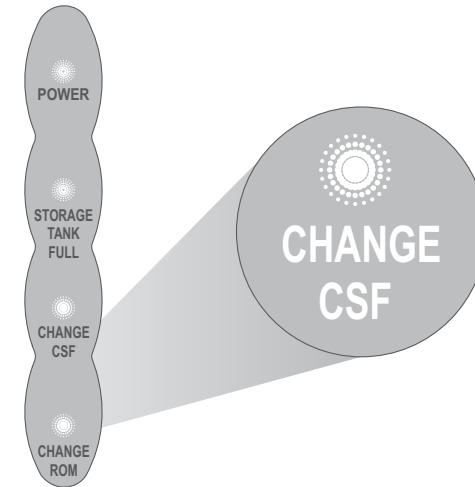

The indicator is GREEN – This means the CSF is safe to use.

The indicator blinks RED continuously – The CSF usage has crossed 385 hours and hence the life of CSF will end soon, it is time to replace the pre filter and carbon cartridge. You need to order for CSF Germkill Kit™.


The indicator turns completely RED – The CSF life of 400 hours*# is over and it must be replaced. At this point in time the mechanism shuts the water flow thus ensuring you don't drink unsafe water even by accident.

* The CSF life of 400 hours typically gives 4000 litres of purified water under tested conditions of 18 PSI input pressure, 450–500 PPM TDS and 25 °C temperature.

While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.

ADDITIONAL ASSURANCE OF SAFETY

'Change ROM' indicator

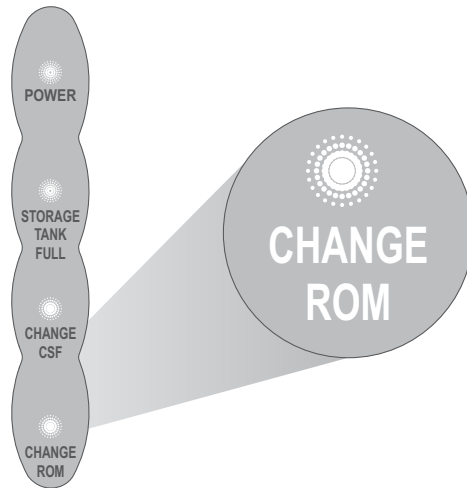


The indicator is GREEN – This means the RO Membrane and the UVM is safe to use.
 The indicator blinks RED continuously – The RO and the UVM has crossed 785 hours and hence the life of membrane will end soon, it is time to replace the RO Membrane and the UVM.
 The indicator turns completely RED: The RO and UVM's life of 800 hours*# is over and it must be replaced. You need to order for the Membrane Germkill Kit™.
 At this point in time the mechanism shuts the water flow thus ensuring you don't drink unsafe water even by accident.

* The ROM life of 800 hours typically gives 8000 litres of purified water under tested conditions of 18 PSI input pressure, 450–500 PPM TDS and 25°C temperature.
 # While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.


CLEANING AND MAINTENANCE

①

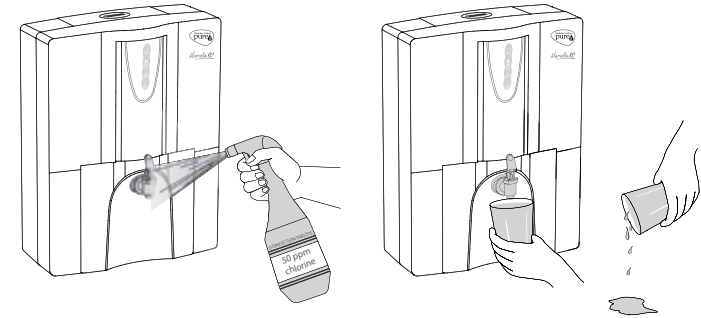

You can clean the tap by using disinfectants like bleach/ hypochlorite (50 PPM available chlorine). Discard 2 litres of water after cleaning the tap.


②

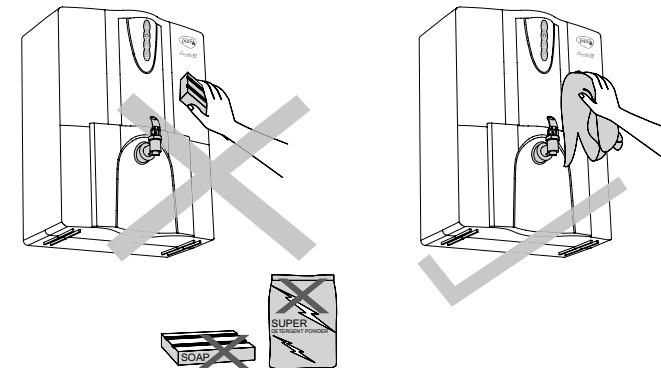

External portion of the purifier must be cleaned using wet cloth only.
 Do not use detergent or soap.


CLEANING AND MAINTENANCE

③

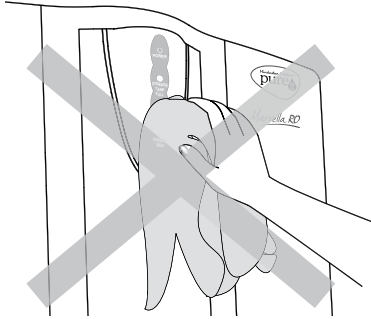

Do not extensively clean and rub the decorative parts and on the LED display panel as this might lead to scratches on the parts.


④

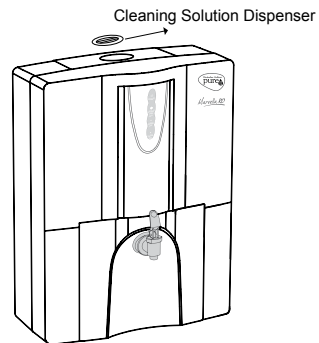

You can clean the storage tank by using the disinfectant which can be bought by calling our Pureit helpline number. To clean the tank just open the cleaning solution dispenser and put 1 ml of the solution (10–15 drops) into the storage tank. (Ensure the tank is not empty). Once the storage tank is full just drain the entire water.


CLEANING AND MAINTENANCE

⑤

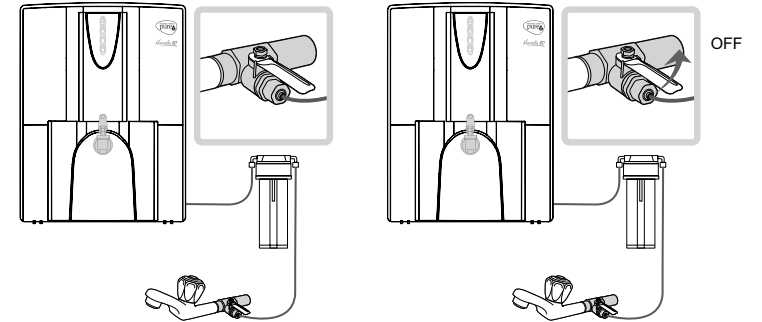

Always switch off the 'ball valve' and electrical power, if you are out of home for long duration.


⑥

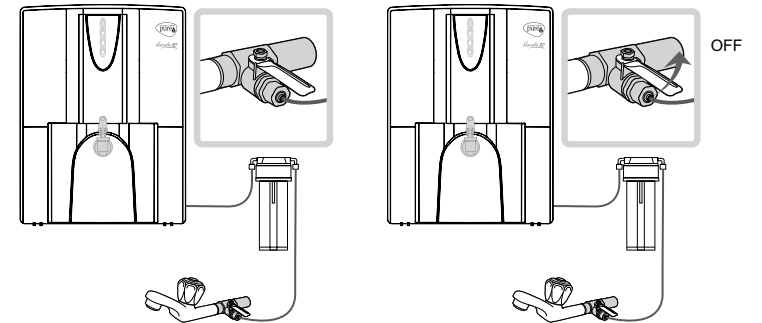

Turn off the ball valve and switch off the power if you notice any leakage from the purifier.


CLEANING AND MAINTENANCE

⑦

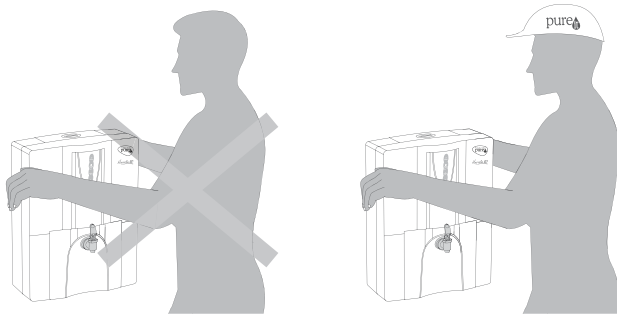

Do not try to open the purifier for cleaning or for any replacements. This can be done only by qualified company personnel or an authorized agent.


⑧

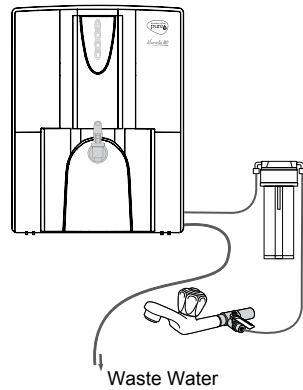

Do not consume the water from the waste water tube, as it is not suitable for drinking. However, you can use that water for gardening or for cleaning the floors.


CLEANING AND MAINTENANCE

⑨

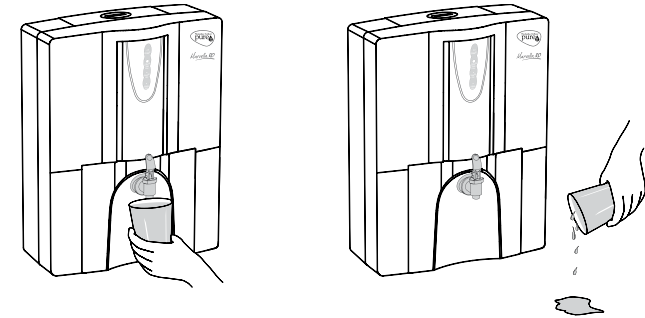

You can discard the water in the storage tank once in 15 days. Always drain the water in the storage tank if you have not used the purifier for more than 2 days.


⑩

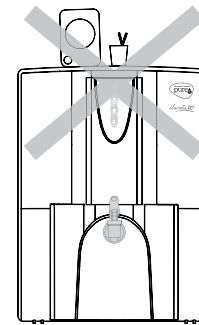

Do not put heavy or sharp objects on the purifier.


CLEANING AND MAINTENANCE

⑪

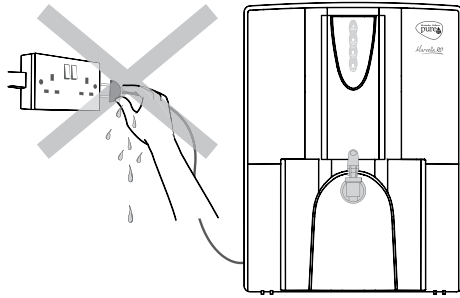

Do not plug or unplug the power cord with wet hands. Ensure that the plug isn't wet while plugging in, or plugging out to avoid risks such as electrical shock or fire.


⑫

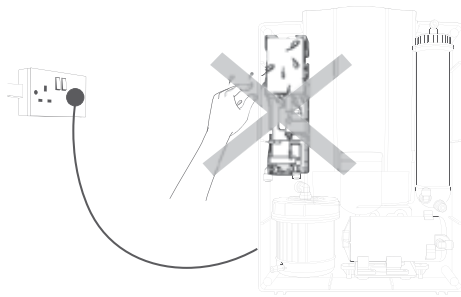

Never splash the filtration system with water while cleaning.


CLEANING AND MAINTENANCE

⑬

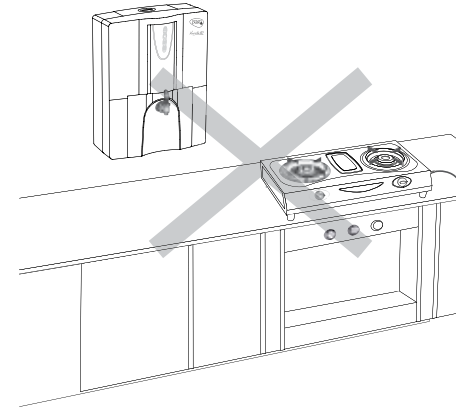

Keep the cord away from wiring conjunctions to avoid hazard. Never put the cord under rugs, near heat resistors, radiators, stoves or heaters.


⑭

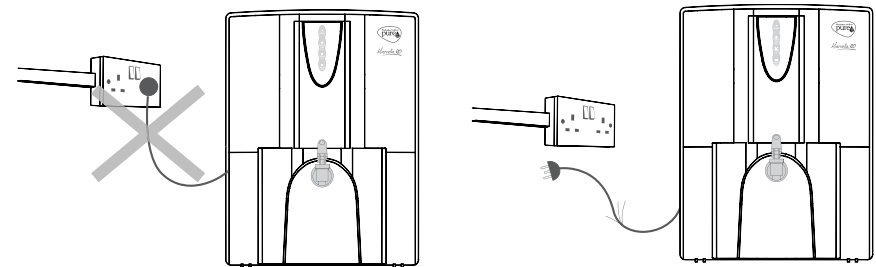

If the power cord is damaged, the power adapter must be replaced and not used.


CLEANING AND MAINTENANCE

⑮

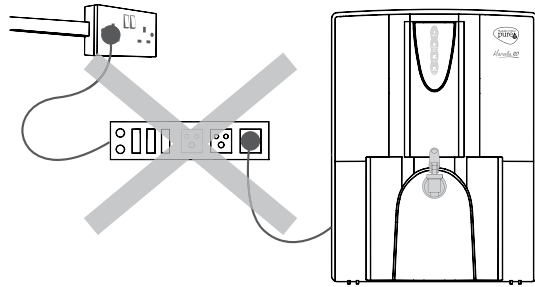

Avoid using an extension cord.


⑯

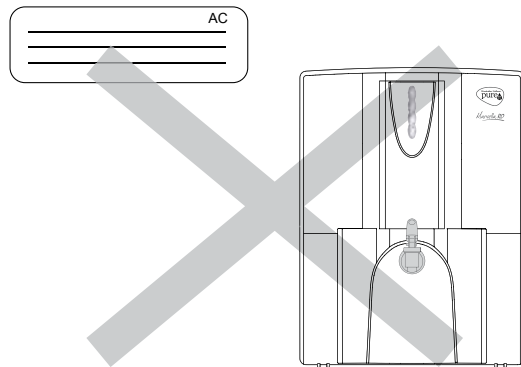

Do not install the purification unit where it could freeze.


CLEANING AND MAINTENANCE

⑰

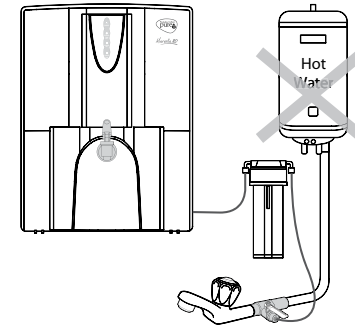

Do not run hot water over 45 °C through the purifier.


⑱

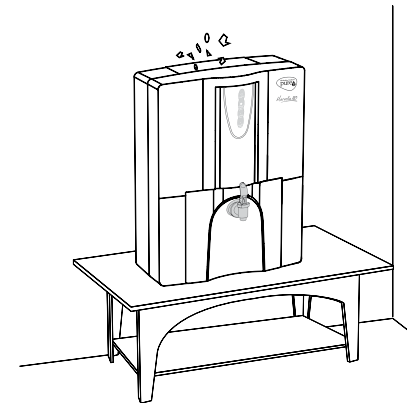

Do not allow any foreign or unexpected material to enter into the storage tank. The filtered water in the storage tank may deteriorate in the process.


CLEANING AND MAINTENANCE

①9

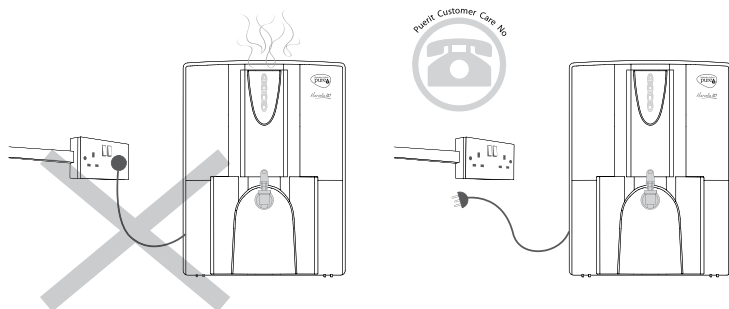

In case of any smoke or burning smell, remove the plug immediately and call the Pureit service centre.

②0

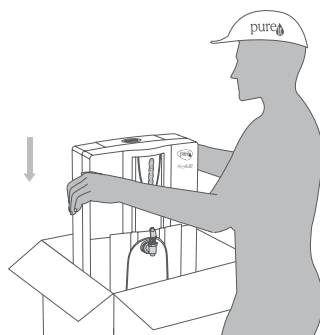

When shifting your house, get the purifier duly inspected and packed by the Pureit service technician. Remove water from the storage tank and properly pack the purifier in case of shifting.

CLEANING AND MAINTENANCE

- ②1 Please ensure to switch off the power whenever you turn off the ball valve.
- ②2 Please dispose the used consumables like sediment filters, carbon filter and membranes along with the other household waste through the municipal disposal system.
- ②3 Always rely only on the RED indicator to replace the consumables and membrane. The RO Purity Lock is only an additional assurance of safety. In some cases the input water quality may prevent it from functioning.
- ②4 You should only store water in the purifier and not use other bottles and containers. If you do so, water may get contaminated.
- ②5 Do not use water not intended for drinking in the purifier. e.g. abandoned or abused water bodies or water sources in which human, animal or industrial wastes are adsorbed.
- ②6 Do not use hot or boiling water in the purifier. Similarly do not use freezing cold water (less than 10 °C) in the purifier.
- ②7 The output water may continue to have flora which are harmless and pose no health hazard to normal healthy adults and children.

ORDERING CSF GERMKILL KIT™ AND MEMBRANE GERMKILL KIT™



Phone
1860-180-1000
1860-500-5678
6001 2244
or




Log in
www.pureitwater.com




Please call the Pureit helpline number to find out the current cost of the Pureit Germkill Kit™.

GERMKILL KIT™

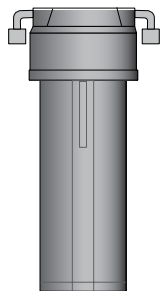

Pre-sediment filter

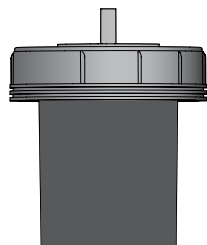

Carbon filter

Pureit Marvella RO™ works on a set of consumables which needs to be replaced at regular intervals based on the water consumption.

There are 2 types of Germkill Kit™ of Pureit Marvella RO™:

CSF (Carbon and Sediment Filter) Germkill Kit™: This consumable set includes pre-sediment filter and the carbon filter. The life of both the components is approximately 4000 litres* of purified water depending on the input water pressure and TDS. You need to change the CSF Germkill Kit™ when the 'Change CSF' indicator turns RED.



RO Membrane



Ultra Ventilated Membrane (UVM)



Post-sediment filter

Membrane cum CSF Germkill Kit™: This consumable set includes a Pre-sediment filter, Post-sediment filter, Carbon filter, RO Membrane and UVM. The life of the RO Membrane and UVM is approximately 8000 litres* of purified water depending on the input water pressure and TDS. You need to change the Membrane Germkill Kit™ when the 'Change ROM' indicator turns RED.

*Please note the Membrane Cum CSF Germkill Kit™ contains Pre-sediment filter & Carbon filter for which the life is typically 400 hours, under tested conditions of 18 PSI input pressure, 450–500 PPM TDS and 25 °C temperature.

#While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.

FAQs

How does Pureit Marvella RO™ purify water?

Pureit Marvella RO™ has a 5-stage purification system which ensures you get water that is 'As Safe As Boiled Water™' and also removes excess total dissolved solids (TDS) to make your water tastier.

In the first stage, the water passes through the Pre-sediment filter which removes fine and coarse particulate impurities/dirt.

The second stage is the Carbon filter that removes chlorine and organic impurities like harmful pesticides. It also adsorbs bad taste and odour-causing organic compounds from water.

The third stage is the Post-sediment filter which removes the remaining dirt.

Then the water passes through the RO Membrane at high pressure, with the help of an inbuilt pump. The RO removes dissolved salts, hardness, pesticides and heavy metals like arsenic, lead and mercury. It also removes microbial contaminants like bacteria, virus, protozoa and parasites.

The last stage is the Ultra Ventilated Membrane (UVM) which acts as an additional assurance of safety towards microbial contaminants.

What is the storage capacity of 'Pureit Marvella RO™'?

Marvella RO™ has a storage tank capacity of 8 litres. The process of filling the storage tank is fully automatic and when you take water out of the tank, the purification process automatically starts and refills the storage tank.

How much time it takes to purify water in 'Pureit Marvella RO™'?

'Pureit Marvella RO™' can purify water upto 9–12 litres per hour. However, the time taken to purify depends on the life of the filters, the input water pressure, TDS and other impurities present in water.

What is Advance Alert System?

Pureit's Advance Alert System give you a complete status update on the functioning of your purifier thereby assuring you safe water and maximum convenience. It has 4 indicators:

Power - Tells you if the purifier is ON or OFF. When it is ON it will turn GREEN.

Water Tank Full – Tells you if the water tank is full or not. This indicator will turn GREEN when the tank is full.

Change CSF – Tells you if the consumables (which includes the pre-sediment filters and the carbon filter) is safe, nearing end of life or has reached end of life.

When the light is GREEN, it indicates the filters are safe to use.

When the light starts blinking RED, it indicates that the filters have reached 385 hours of usage and nearing the end of life (400 hours*) and only 15 hours of usage is left before you replace them.

When the light turns completely RED it indicates that the filters need to be replaced and purified water supply has been stopped.

Change ROM – Tells you if the RO Membrane is safe, nearing end of life or has reached end of life.

When the light is GREEN, it indicates the membrane is safe to use.

When the light starts blinking RED, it indicates that the membrane has reached 785 hours of usage and nearing its end of life of 800 hours** and only 15 hours of usage is left before you replace them.

When the light turns completely RED then it indicates that the RO Membrane, Ultra Ventilated Membrane (UVM) and Post-sediment filter needs to be replaced and the water supply has been stopped.

*Please note you need to replace the Pre-sediment filter and Carbon filter as well when you replace the RO Membrane and Ultra Ventilated Membrane (UVM).

How will I get new consumables/membranes replaced?

You need to call the Pureit Helpline number and order for a Germkill Kit™. The Customer care specialist will visit your place and replace the Germkill Kit™ at a nominal cost.

* The CSF life of 400 hours approximately gives 4000 litres of purified water under tested conditions of 18 PSI input pressure, 450–500 PPM TDS and 25 °C temperature.

** The ROM life of 800 hours approximately gives 8000 litres of purified water under tested conditions of 18 PSI input pressure, 450–500 PPM TDS and 25 °C temperature.

While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.

What are all the consumables which are to be replaced?

You need to replace the pre-sediment filter and carbon filter when the "CHANGE CSF" starts blinking RED. These parts can be bought together by ordering "CSF Germkill Kit™".

You need to replace the Pre-sediment filter, carbon filter, Post-sediment filter, RO Membrane and Ultra Ventilated Membrane (UVM) when the "CHANGE ROM" starts blinking RED. These parts can be bought together by ordering "Membrane cum CSF Germkill Kit™".

Can I drink the first purification cycle of water from the purifier?

No, it is recommended to throw the first cycle of water that is filled in the storage tank when the new Pureit Marvella RO purifier is installed, and also whenever the Germkill Kits™ are replaced.

What should I do if there is no purified water in the storage tank?

In case there is no purified water in the storage tank then you need to first check whether the LED display shows RED in either "CHANGE CSF" or "CHANGE ROM". If it shows GREEN or is blinking RED and still there is no water supply then you can check whether the ball valve is closed or the power is off. If none of the above 3 cases are true, please call Pureit service centre for help.

Can I open and service my purifier?

It is not recommended to open and service device by an individual. Call our customer care if you face any issue which requires servicing and opening the device.

Can I use the reject water?

It is not recommended to use the reject water for any kind of consumption (drinking or cooking). It can probably be used for gardening or cleaning floors.

What should I do if any part of the purifier is broken?

Please call the Pureit helpline number. Our technicians will visit your house and will guide you on the repairs required. There will be a nominal visiting charge and you would need to buy the parts required.

What should I do if there is a leakage from the purifier?

First switch off the ball-valve if you find any leakage from the purifier and turn off the power switch. Check for any visual improper fitment (like tap) and then call our Pureit helpline number and register a service request.

How long the stored water in Pureit Marvella RO™

You can use stored water for 2 days. If it is not used for more than 2 days we advice you to discard that water, refill and then consume.

TROUBLESHOOTING

The water from the purifier tastes unusual

This might be because of one or more of the following reasons:

- The storage tank has not been cleaned for a long time – Please clean the storage tank after removing the water with a mild hypochlorite solution. The hypochlorite solution can be ordered by calling our helpline number.
- The water is stored for too long in the storage tank – Please drain the stored water and fill fresh water.
- The filters or the membranes need to be replaced/cleaned – Please replace or get them cleaned by calling the Pureit helpline number.

The purification is taking more time

This might be because of one or more of the following reasons:

- The ball valve may not be opened fully – Please ensure the ball valve is open completely so that the water flow is not restricted.
- The temperature of input water might have dipped drastically.
- Check if the filter is choked or damaged, if yes then you need to replace the filters.

The storage tank is not getting filled

This might be because of one or more of the following reasons:

- Check if the ball valve is kept open.
- Check if either 'replace CSF' or 'replace ROM' is RED. If yes then replace the filters/membrane.
- Check if there is any leakage from the purifier and if there is any leakage then call the Pureit helpline number.



Warranty Card

Pureit Marvella RO™ Water Purifier Warranty Registration Card

Serial No. _____

Date of Purchase: _____

Purchaser's Name: _____

Telephone No. _____

Address: _____

Dealer's Name: _____

Address: _____

Dealer's Signature
(with rubber stamp)

Note:

1. Please retain the bill of purchase.
2. Please quote Serial number, Model and Date of Purchase in all your correspondence.

'PUREIT MARVELLA RO™' WARRANTY DETAILS

Product warranty

The 'Pureit Marvella RO™' guarantees that you will get 'As Safe As Boiled Water™' as described in 'Pureit Marvella RO's Unique Technology' section as long as the 'Pureit Marvella RO™' is used in the manner specified in this manual.

1. The Consumables including the Sediment filter, Carbon filter, Post-Sediment Filter, RO Membrane and Ultra Ventilated Membrane (UVM) will not be covered under warranty#.
2. The warranty does not cover external booster pump, pressure reducing valve which is bought as an accessory to the purifier.
3. All other components including the electrical parts will have a 12-month warranty against the manufacturing defects.

This warranty is subject to the following conditions:

The customer will notify the company in writing or by calling the help line promptly if any defects are noticed and give the company or its authorised agent adequate opportunity to inspect, test and remedy them. For this the customer may have to deposit the 'Pureit Marvella RO™' if so required by the company, with the company's office/ service centre/authorised dealer along with the original invoice, in the city where they are sold.

Inspection and test report of the company's office/service centre/authorised dealer will be final and binding under the warranty for determining defects, repairs/alterations required or carried out, or certifying working of the 'Pureit Marvella RO™' thereafter.

The company's obligation under this warranty shall be limited to repairing or providing replacement of parts, which are found to be defective.

The company or its authorised customer care centre/licensed service provider reserves the right to retain any part(s) or component(s) replaced at its discretion, in the event of a defect being noticed in the equipment during the warranty period.

The company's liability under this warranty shall in no event, and under no circumstances, exceed the price paid by the customer.

This warranty is confined to the first purchaser of the product only and is not transferable.

In the event of repairs of any part/s of the 'Pureit Marvella RO™', this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

The warranty is issued at Mumbai, and courts at Mumbai shall have exclusive jurisdiction over matters covered or flowing from this warranty.

The company obligation is only for effective repairs of any defective part of the 'Pureit Marvella RO™', and not for 'Pureit Marvella RO™' replacement as such.

Repairs or replacements will be carried out either by the dealer from whom the device has been purchased or through a Company Customer Care Centre, or the Authorised Licensed service provider with whom the device has been registered.

For units installed beyond the municipal limits of the jurisdiction of the Authorised licensed service provider or company customer care centre, all expenses incurred in collecting the device(s) for part(s) thereof from the company's customer care centre or licensed service centre, as well as expenses incurred in deputing of service personnel/technicians towards conveyance and other incidentals etc. will be borne by the customer.

The warranty is void if any repair work is carried out by persons other than those of the company, or its authorised dealers.

Any part(s) of the electrical and purifier system replaced by the company at its discretion shall be with a functionally operative part.

The concerned customer care centre or Licensed service provider will advise the customer whether to effect the repair at site or at the customer care centre.

While Germkill Kit™ (CSF) will be changed after 4000 litres and there's an Auto Shut Off to force this change, Sediment Filter may have to be changed in the interim depending on the quality of input water.

'PUREIT MARVELLA RO™' WARRANTY DETAILS

Warranty does not cover accessories external to the equipment supplied by the dealer.

In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Replacement of parts would be purely at the discretion of HUL, the same part model shall be replaced and in the event such part model has been discontinued, it shall be replaced with the part model of price equivalent at the time of purchase.

In case of any damage to the product/customer abuse/repairs by unauthorized personnels/misuse detected by the authorized service center personnel, the warranty conditions are not applicable and repairs will be done subject to availability of parts and on a chargeable basis only.

This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect in the water purifier. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period.

The warranty is not applicable in any of the following cases:

01. The completed warranty card is not presented to authorized service personnel at the time of service of the product.
02. The product is not operated according to instructions given in the operating instruction booklet.
03. The device is not installed in the proper procedure specified.
04. Any defect caused due to improper electrical circuit outside the device in the house or by any defective electrical supply.
05. Defects are caused by improper or reckless use, which shall be determined by the company personnel.
06. Any repair work is carried out by the persons other than authorized service personnel.
07. The damages caused by due to transportation or shifting is not covered by warranty.
08. Defects are due to causes beyond control like lightening, abnormal voltage, acts of god or while in transit or service center or purchasers residence. (normal voltage range specified 230 volts+/-10% with 50Hz). Customer shall ensure that a stabilizer is installed in those areas where voltage is not available within the warranty range (230V +/- 10%). The stabilizer should be of any reputed manufacturer.
09. The warranty will automatically terminate after 12 months expiry of the warranty period even though the device may not be in use for any time during the warranty period for any reason.
10. Only courts in Mumbai will have the jurisdiction for settling any claims.
11. The serial number of the device or any part thereof is damaged, defaced, altered, obliterated, or tampered with or removal for any reason whatsoever.

This warranty is valid in India only.

Notwithstanding anything to the contrary contained in, or implied by this warranty:

The company's liability under this warranty shall be limited only to defects in the 'Pureit Marvella RO™' which occur under the conditions of normal operation of the 'Pureit Marvella RO™' and their proper and prescribed use as per this user manual. This warranty does not cover or extend to defects which are determined by the company or its authorised agents as occurring or resulting from or attributable to negligence, abuse, misuse, faulty care, operation or maintenance or repairs, alterations to the 'Pureit Marvella RO™' or any part thereof by others.

General

For the purpose of this warranty, the following expressions shall have the following meanings respectively:

- 'The 'Pureit Marvella RO™' shall mean the 'Pureit Marvella RO™' described in the invoice.
- 'The customer' shall mean the purchaser of the 'Pureit Marvella RO™' from the company or the company's authorised dealer who is a party to the invoice.
- 'The company' shall mean Hindustan Unilever Limited.
- 'Invoice' shall mean the Invoice issued for the 'Pureit Marvella RO™' by the company or its authorised dealer to the customer describing the 'Pureit Marvella RO™' and indicating, inter alia, the total purchase price thereof, the name of the customer, and the place where the 'Pureit Marvella RO™' is to be delivered.
- 'User manual' shall mean the instructions for installation, use and maintenance contained in the leaflet published by the company, and delivered to the Customer at the time of sale of the 'Pureit Marvella RO™'.

STATEMENT OF HINDUSTAN UNILEVER'S INTELLECTUAL PROPERTY RIGHTS

The following are covered under Hindustan Unilever's Intellectual Property Rights:

Pureit Marvella RO™

Germkill Kit™

As Safe As Boiled Water™

Germkill Life Indicator™

Ultra Ventilated Membrane (UVM)

RO Purity Lock

Advance Alert System



Hindustan Unilever Limited

© HUL 2011